

Register your product
and get support at
www.philips.com/welcome

SRP1101/10



EN User Manual

PHILIPS

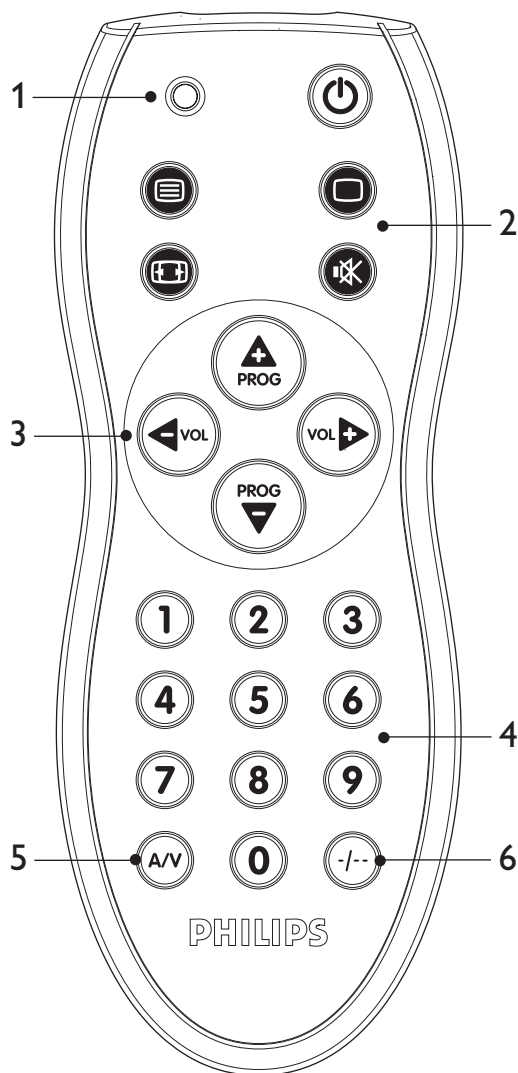


Table of contents

1	Your SRP1101	3
2	Getting started	3-6
2.1	Inserting the batteries	3
2.2	Setting up the universal remote control	4-6
3	Using the universal remote control	6-8
3.1	Buttons and functions	6-7
3.2	Resetting a button to its original function	7-8
4	Service and support	8-10
4.1	Frequently asked questions	8-10
4.2	Need help?	10
	Helpline	10
	Brandlist	11-20
	Information to the consumer	21
	Compliance with EMF	21
	Recycling and disposal	21
	Battery information	21

1 Your SRP1101


Congratulations on your purchase of the Philips SRP1101 universal remote control. After setting up the remote control you can operate the most-used functions of almost any brand of TV.

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

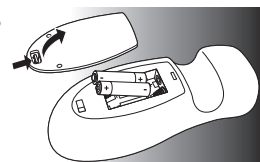

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.


2.2 Setting up the universal remote control

The remote control can be set up to operate traditional TV, flat screen TV and projection TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos.

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

- 2 Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds**.

- The green Setup light  lights up. The remote control is now in setup mode.

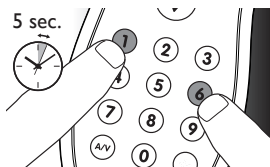


- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A four-digit code is shown for each brand.


Use the digit buttons to enter the code for your brand:

- If the green Setup light  turns off, an invalid code was entered. In this case, try again.

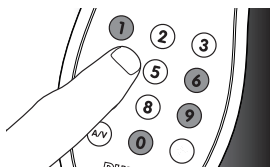


- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.

- The remote control is now set up to operate your TV.
- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

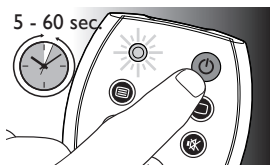


- 5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the ,  and digit buttons function properly.

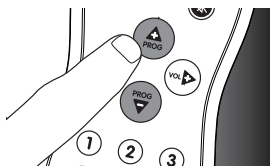

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.1.

- 6 Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

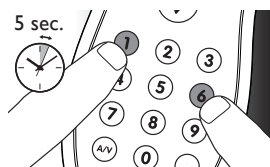

Important

If you made a mistake:

- Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds** to exit setup. The green Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Improving buttons

When correctly set up, the remote control should be able to operate your TV. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.



Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup


- 1 Make sure that the TV is switched on.
 - 2 Press the button that does not function, keep it pressed and **immediately** release it when the TV responds. Repeat this for every button that does not function.
- If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup

1 Make sure the TV is switched on.

2 Keep buttons ① and ④ pressed simultaneously for 5 seconds.

- The green Setup light ① lights up. The remote control is now in setup mode.

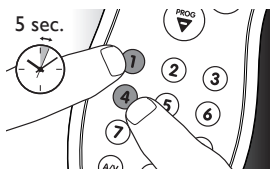


3 Press and hold the button that does not function and immediately release it when the TV responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

4 Keep buttons ① and ⑥ pressed simultaneously for 5 seconds to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

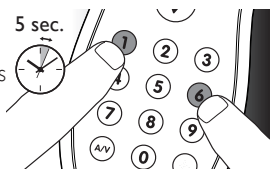

3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons that you need for operating your TV.

Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP1101.
- Only functions that are available on your original remote control can be used for operating your TV with the SRP1101.

- 1 ① setup light. Lights up when a remote control command is being sent and when the remote control is in setup mode.
- ② switches the TV on/off.

Note


For some TV brands/types, the ② button will only switch off the TV. You will have to press a digit button (direct channel selection) to switch on the TV again.

- 2 ③ teletext on (③)/off (④).
- ⑤ selects between regular (4:3) and wide screen (16:9) TV.
- ⑥ mutes TV sound.
- 3 ⑦ previous channel.
- ⑧ adjust TV volume.
- 4 ① ② ③ digit buttons for direct channel/track selection.
- ④ ⑤ ⑥
- ⑦ ⑧ ⑨
- ⑩
- 5 ⑪ switches between external (Audio/Video) inputs of your TV.
- 6 ⑫ selects between one and two-figure channel numbers and channel numbers with more than two or three figures.

3.2 Resetting a button to its original function

If an improved button (see chapter 2.2.1) still does not function as expected, you can always reset the button to its original function.

- 1 Keep buttons ① and ⑥ pressed simultaneously for 5 seconds, until the green Setup light ① lights up.
- The remote control is now in setup mode.
- 2 Press digit buttons ⑨, ⑨ and ⑥, in that order:
- After each button press the green Setup light ① blinks once.

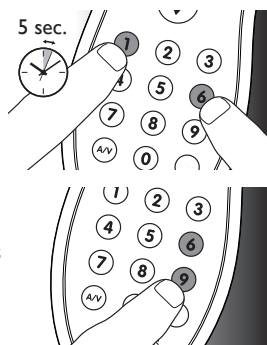

- 3 Press the button that you wish to reset **twice**.

E.g. the  button.

- After each button press the green Setup light  blinks once.
- The green Setup light  will blink one more time to confirm that the button was successfully reset to its original function.



4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my TV is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV brands.

- You will find a complete brand list on page 11-20 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV turns OFF in step 4 but does not turn ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.1) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.1.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The TV does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control.
- Try improving buttons. See chapter 2.2.1.

Wrong code selected during setup.

- Set up the remote control again. Always test if the TV responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.1.
- Check whether you are using the correct button to switch on Teletext. For TV this is the  button.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?
No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP1101, you can always contact us.

When calling our helpline, make sure to have the SRP1101 at hand when you call, so that our operators can help you determine whether the SRP1101 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP1101/10.

Date of purchase://
(day/month/year)

For **online support** go to:
www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

 Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

A		Aristona.....0192
4Kus.....	0005	Arthur Martin.....0200
A.R. Systems.....	0012	ASA 0202
Acme.....	3521	Asberg.....0205
Acura.....	0036	Asono.....0212
ADA.....	0038	Astra.....0221
ADC.....	0040	Asuka.....0227
Addison.....	0043	ATACOM.....0228
Adelsound.....	0044	Atlantic.....0233
Admiral.....	0046	Atori.....0237
Adyson.....	0058	Auchan.....0240
AEG.....	0059	Audiosonic.....0264
Agashi.....	0063	Audioton 0266
Agazi.....	3522	AudioTon.....0266
AGB.....	0064	Ausind.....0276
Aiko.....	0069	Autovox 0280
Aim.....	0070	Avious.....0291
Airis.....	0071	Awa.....0296
Aiwa.....	0072	Ayomi.....3525
Akai.....	0074	
Akiba.....	0078	B
Akito.....	0082	Baird 0311
Akura.....	0083	Bang & Olufsen.....0314
Alaron.....	0085	BARON 3959
Alba.....	0086	Basic Line.....0325
Alcyon.....	0093	Bastide.....0327
Alize.....	0100	Baur 0331
Alkos.....	3523	Baze 0334
Allorgan.....	0105	Bazin 0335
Allstar.....	0108	BBK.....0337
Ambassador.....	0120	Beijing.....0345
Amitech.....	0130	Beko 0346
Amoi.....	0132	Bellagio.....0354
AMOi.....	0132	BenQ 0359
Amplivision.....	0138	Beon.....0361
Amstrad.....	0140	Best.....0364
AMW.....	0143	Best Buy.....0365
Anam.....	0146	Bestar.....0368
Anam National.....	0147	Bestar-Daewoo.....0369
Anglo.....	0151	Binatone.....0378
Anitech.....	0154	Black Panther Line.....4196
Ansonic.....	0156	Black Star.....0386
AOC.....	0165	Blacktron.....3526
Apex.....	3691	Blackway.....0388
Apollo.....	0171	Blaupunkt.....0390
Arc En Ciel.....	0178	Blue Sky.....0395
Arcam.....	0179	Blue Star.....0396
Arcam Delta.....	3524	Boghe.....0400
Ardem.....	0184	Bondstec.....0403

Boots.....	0405
BPL.....	0413
Brainwave.....	0415
Brandt.....	0416
Brinkmann.....	0423
Brionvega.....	0424
Britannia.....	0425
Bruns.....	0435
BskyB.....	0436
BSR.....	0437
BTC.....	0439
Bush.....	0445

C

Caihong.....	0462
Cambridge Audio.....	0470
Cameron.....	4032
Capsonic.....	0486
Carad.....	0488
Carena.....	0489
Carrefour.....	0492
Cascade.....	0496
Casio.....	0499
CAT.....	0500
Catha.....	4094
Cathay.....	0501
Catron.....	0502
CCE.....	0504
Celestial.....	0511
Centrex.....	0516
Centrum.....	0519
Centurion.....	0520
Century.....	0521
CGE.....	0523
CGV.....	0524
Changcheng.....	0526
Changfei.....	0527
Changhai.....	0529
Changhong.....	0530
Chimei.....	3563
Chuangjia.....	4096
Chunfeng.....	0546
Chung Hsin.....	0547
Chunsun.....	0549
Cimline.....	0552
Cinetec.....	0560
CineVision.....	0562
City.....	0569
Clarivox.....	0576

Classic.....	0580
Clatronic.....	0581
CMS.....	0590
CMS Hightec.....	0591
Coby.....	0597
Concorde.....	0626
Condor.....	0627
Conia.....	0628
Conrowa.....	0634
Contec.....	0635
Continental Edison.....	0637
Cosmel.....	0647
Crosley.....	0655
Crown.....	0658
CS Electronics.....	0663
CTC.....	0664
CTC Clatronic.....	3527
C-Tech.....	0449
CVG.....	3996
CyberHome.....	0672
Cybertron.....	0675

D

Daenyx.....	0690
Daewoo.....	0692
Dainichi.....	0694
Dansai.....	0699
Dantax.....	0702
Datron.....	4201
Datsura.....	0703
Dawa.....	0707
Daytek.....	0708
Dayton.....	0709
Daytron.....	0710
De Graaf.....	0716
DEC.....	0717
Decca.....	0718
Deitron.....	0722
Denko.....	0730
Denon.....	0731
Denver.....	0733
Denzel.....	0734
Desay.....	0737
Desmet.....	0738
Diamant.....	0746
Diamond.....	0747
Digatron.....	0751
Digiline.....	0759
Digitor.....	0781

Dixi.....	0807
DK Digital.....	0808
Dmtech.....	0813
Dongda.....	0820
Donghai.....	0821
Drean.....	0832
DTS.....	0837
Dual.....	0838
Dual-Tec.....	3528
Dumont.....	0840
Duongie.....	4101
Dux.....	0843
D-Vision.....	0684
DVX.....	0847
Dynatron.....	0855
Dynex.....	3476

E

Easy Home.....	3700
Eclipse.....	0867
E-Dem.....	3624
Elbe.....	0880
Elbe-Sharp.....	3529
Elcotech.....	0882
Elcit.....	0883
Electa.....	3530
ELECTRO TECH.....	3531
Electrohome.....	0890
Elektra.....	0896
Element.....	3477
ELG.....	0900
Elin.....	0902
Elite.....	0903
Elman.....	0907
Elsay.....	0909
Elta.....	0910
Emerson.....	0917
Emperor.....	0921
Enzer.....	0934
Epson.....	0937
Erres.....	0942
ESC.....	0945
Etron.....	0949
Etzuko.....	4203
Eurofeel.....	0954
EuroLine.....	0955
Euroman.....	0956
Europa.....	0957
Europhon.....	0959

Expert.....	0976
Exquisit.....	0978

F

Fagor Life.....	4102
Feilang.....	0990
Feilu.....	0991
Feiyue.....	0993
Fenmenti.....	4103
Fenner.....	0994
Ferguson.....	0996
Fidelity.....	0998
Filsai.....	1000
Finlandia.....	1003
Finlux.....	1004
Fintec.....	1006
Firstline.....	1008
Fisher.....	1009
Flint.....	1014
FNR.....	1016
Formenti.....	1023
Formenti/Phoenix.....	3532
Formenti-Phoenix.....	1024
Fortress.....	1027
Fraba.....	1030
Friac.....	1040
Frontech.....	1042
Fujitsu.....	1052
Fujitsu General.....	1053
Funai.....	1056

G

Galaxi.....	1068
Galaxis.....	1069
GBC.....	1078
Geant Casino.....	1082
GEC.....	1083
Geloso.....	1087
General.....	1090
General Technic.....	1095
Genexxa.....	1097
Gericom.....	1103
GFM.....	3820
Giant.....	1113
Giec.....	1115
Global Solutions.....	1120
Global Sphere.....	1121
Go Video.....	1126
GoldHand.....	1136

Goldline.....	1138	Huanghaimei.....	1288
GoldStar.....	1140	Huanghe.....	1289
Goodmans.....	1142	Huanglong.....	1290
Gorenje.....	1144	Huangshan.....	1291
GPM.....	1149	Huanyu.....	1292
Gradiente.....	1151	Huari.....	1294
Graetz.....	1152	Huijiaban.....	4108
Granada.....	1154	Humax.....	1298
Grandin.....	1156	Hygashi.....	1308
Great Wall.....	4105	Hyper.....	1309
Gronic.....	1160	Hypson.....	1312
Grundig.....	1162	Hyundai.....	1315
Grunkel.....	1164		
GVG.....	1169		

H

H&B.....	3635	Iberia.....	1320
Haaz.....	1172	ICE.....	1324
Haier.....	1175	ICeS.....	1325
Haihong.....	1176	Impego.....	4207
Halifax.....	1179	Imperial.....	1346
Hampton.....	1183	Indesit.....	1349
Hanseatic.....	1190	Indiana.....	1350
Hantarex.....	1192	Ingelen.....	1354
Hantor.....	1193	Ingersol.....	1355
Harman/Kardon.....	1198	Inno Hit.....	1358
Harwood.....	1204	Innovation.....	1360
Hauppauge.....	1206	Interactive.....	3534
HCM.....	1210	Interbuy.....	1376
Hema.....	1222	Interfunk.....	1377
Hemmermann.....	1223	Internal.....	1379
Hifivox.....	1233	International.....	1380
Higashi.....	1234	Intervision.....	1386
Highline.....	1236	IR.....	4110
Hikona.....	1237	Irradio.....	1396
HiLine.....	3533	Isukai.....	1402
HiMAX.....	1241	ITC.....	1404
Hinari.....	1243	ITS.....	1405
Hisawa.....	1247	ITT.....	1406
Hisense.....	1249	ITV.....	1408

J

Hitachi.....	1251	JEC.....	1426
Hitachi Fujian.....	1252	Jiahua.....	1435
Hitsu.....	1257	Jinhai.....	1439
Hoeher.....	1262	Jinxing.....	1442
Home Tech Industries.....	1266	JVC.....	1464
Hongmei.....	1272		
Hornlyphon.....	1277		
Hoshai.....	1278		
Huafa.....	1287		

K

Kaisui.....	1471	Kendall.....	1500
Kamosonic.....	3535	Kennedy.....	1504
Kamp.....	1475	Kennex.....	1505
Kangchong.....	1476	Kenwood.....	1507
Kanghua.....	1477	KeyPlug.....	3646
Kangwei.....	4115	KIC.....	1512
Kansai.....	1480	Kiirio.....	1513
Kapsch.....	1483	Kingavon.....	1519
Karcher.....	1484	Kingsley.....	1520
Kawa.....	1487	Kiota.....	1522
Kawasho.....	1489	Kiss.....	1524
Kendo.....	1500	Kiton.....	1525
Kennedy.....	1504	Kneissel.....	1535
Kennex.....	1505	Koda.....	1539
Kenwood.....	1507	Kolin.....	1541
KeyPlug.....	3646	Kolster.....	1543
KIC.....	1512	Konig.....	1547
Kiirio.....	1513	Konka.....	1548
Kingavon.....	1519	Korpel.....	1552
Kingsley.....	1520	Korting.....	1554
Kiota.....	1522	Kosmos.....	1557
Kiss.....	1524	Koyoda.....	1561
Kiton.....	1525	KTV.....	1572
Kneissel.....	1535	Kuro.....	1579
Koda.....	1539	KXD.....	1581
Kolin.....	1541	Kyoshu.....	1583
Kolster.....	1543	Kyoto.....	1585
Konig.....	1547		
Konka.....	1548		
Korpel.....	1552		
Korting.....	1554		
Kosmos.....	1557		
Koyoda.....	1561		
KTV.....	1572		
Kuro.....	1579		
KXD.....	1581		
Kyoshu.....	1583		
Kyoto.....	1585		

L

L&S Electronic.....	1588	Lesa.....	1622
Lafayette.....	1591	Leyco.....	1627
LaSAT.....	1597	LG.....	1628
Lawson.....	1603	LG/Goldstar.....	3536
Layco.....	4117	Liesenk.....	3537
Lecson.....	1606	Liesenk & Tter.....	1630
Lenco.....	1615	Liesenkotter.....	1631
Lenoir.....	1617	Life.....	3538
		Lifetec.....	1633
		Limit.....	1637
		Liteon.....	1645
		Lloyds.....	3539
		Lloyd's.....	1648
		Local India TV.....	1653
		Loewe.....	1660
		Loewe Opta.....	3540
		LogicLab.....	3650
		Logik.....	1661
		Luma.....	1674
		Lumatron.....	1676
		Lux May.....	1680
		Luxor.....	1683

Lesa.....	1622	M.....	
Leyco.....	1627	M Electronic.....	1688
LG.....	1628	Madison.....	1698
LG/Goldstar.....	3536	Magnadyne.....	1702
Liesenk.....	3537	Magnafon.....	1703
Liesenk & Tter.....	1630	Magnavox.....	1706
Liesenkotter.....	1631	Magnex.....	1707
Life.....	3538	Magnum.....	1709
Lifetec.....	1633	Majestic.....	1713
Limit.....	1637	Mandor.....	1717
Liteon.....	1645	Manesth.....	1718
Lloyds.....	3539	Manhattan.....	1719
Lloyd's.....	1648	Marantz.....	1724
Local India TV.....	1653	Marrelli.....	1729
Loewe.....	1660	Mark.....	1731
Loewe Opta.....	3540	Marquant.....	1734
LogicLab.....	3650	Masuda.....	1744
Logik.....	1661	Matsui.....	1750
Luma.....	1674	Matsushita.....	1751
Lumatron.....	1676	McMichael.....	1768
Lux May.....	1680	Mecotek.....	1776
Luxor.....	1683	Mediator.....	1784

M

M.....		Mediencom.....	1786
M Electronic.....	1688	Medion.....	1787
Madison.....	1698	Medison.....	1788
Magnadyne.....	1702	Melectronic.....	3654
Magnafon.....	1703		
Magnavox.....	1706		
Magnex.....	1707		
Magnum.....	1709		
Majestic.....	1713		
Mandor.....	1717		
Manesth.....	1718		
Manhattan.....	1719		
Marantz.....	1724		
Marrelli.....	1729		
Mark.....	1731		
Marquant.....	1734		
Masuda.....	1744		
Matsui.....	1750		
Matsushita.....	1751		
McMichael.....	1768		
Mecotek.....	1776		
Mediator.....	1784		
Mediencom.....	1786		
Medion.....	1787		
Medison.....	1788		
Melectronic.....	3654		

M-Electronic.....	3541
Melvox	1799
Memorex.....	1800
Memphis	1802
Mercury.....	1804
Metz	1810
MiCO.....	1813
Micromaxx.....	1822
Micromedia.....	1823
Micromega.....	1824
Microstar.....	1827
Migros.....	1832
Minato.....	1835
Minerva.....	1838
Minoka	1840
Minowa.....	1843
Mitsubishi.....	1855
Mivar	1857
Mizuda.....	1860
Monyka.....	1873
Morgans	3970
Motion	1877
MTC.....	1889
MTEC.....	1890
MTLogic.....	1892
Mudan.....	1896
Multi System.....	3542
Multistandard.....	1904
Multisystem.....	4121
Multitec.....	1906
Multitech.....	1907
Murphy	1911
Musikland.....	1915
Mustek.....	1916
Mx Onda.....	1919
Mystral.....	1925

N

NAD	1926
Naiko	1930
Nakamichi	1932
Nakimura.....	1933
Naonis.....	1936
National.....	1942
NEC.....	1950
Neckermann.....	1951
NEI	1952
Nesco.....	1960
Netsat.....	1966
Network.....	1968
Neufunk	1970
Nevir.....	1977
New Tech	1979
New World.....	1980
Next Base	1983
Nicamagic.....	1994
Nikkai.....	1998
Noblex.....	2013
Nobliko.....	2014
Nogamatic	2016
Nokia.....	2017
Nordic.....	2021
Nordmende.....	2022
Nordvision.....	3543
Normerel	2024
Novatronic.....	2035
NU-TEC.....	2048

O

Oceanic	2061
Okana.....	4122
Okano.....	2065
Omni.....	2074
ONCEAS.....	3544
Onida.....	2081
Onimax.....	2082
Onkyo	2085
Onwa.....	2087
Oopla	2088
Opera.....	2090
Optim.....	2094
Orava.....	2101
Orbit.....	2103
Orion.....	2111
Oritron	2112
Online.....	2113
Ormond.....	2114
Orson.....	2115
Orsowe.....	2116
Osaki.....	2118
Osio.....	2121
Oso.....	2122
Osume.....	2123
Otto Versand.....	2126
Oulin.....	4123

P

P&B	2132
Pacific	2135
Pael.....	2140
Palladium.....	2145
Palsonic	2147
Panama	2149
Panasonic.....	2153
Panavision.....	2154
Panda	2155
Pathe Cinema	2168
Pathe Marconi.....	2169
Pausa.....	2171
peekTON	2178
Pensonic	3778
Perdio	2185
Perfekt.....	2186
Philco	2192
Philharmonic.....	2194
Philips.....	2195
Philips Magnavox.....	3715
Phoenix.....	2199
Phonola.....	2201
Phonotrend.....	2202
Pioneer.....	2212
Pionier.....	2213
Plantron.....	2219
Playsonic.....	2224
Pointer.....	2229
Polaroid.....	2230
Poppy.....	2236
Portland.....	2238
Powerpoint.....	2241
Prandoni Prince	4125
Prandoni-Prince	2242
Precision.....	2244
Prima.....	2253
Prinz.....	2260
Profekt.....	4126
Profex.....	2269
Profilo.....	2272
Profitronic.....	2273
Profi-Tronic.....	3545
Proline.....	2274
Promax.....	2275
Prosonic.....	2282
Protech	2284
ProVision	2291
Provision	2291

Pye.....	2302
Pymi.....	2304

Q

Quandra Vision.....	3546
Quasar	2320
Quelle.....	2322
Questa	2324

R

Radialva.....	2329
Radio.....	4128
Radio Shack.....	3547
Radiola	2330
Radiomarelli.....	2331
Radionette	2332
RadioShack	2333
Radiotone.....	2334
Raite	2340
Rank.....	2345
RBM.....	2350
RCA	2351
REC.....	2357
Recor.....	2359
Rectiligne	2362
Rediffusion	2364
Redstar.....	2366
RedStar	2366
Reflex.....	2368
Reoc	2379
Revox.....	2383
Revoy.....	2384
Rex.....	2385
RFT.....	2386
Rhapsody	2387
Rimax.....	2391
R-Line	2327
Roadstar.....	2398
Robotron.....	2401
Ronin.....	2412
Rowa.....	2416
Rownsonic	2417
Royal.....	2419
Royal Lux.....	2420
RTF.....	3548

S		
Saba.....	2429	Sierra.....3549
Sabaki.....	2430	Siesta.....2577
Sagem.....	2434	Sigmatek.....2580
Saisho.....	2437	Silva.....2591
Saivod.....	2439	Silva Schneider.....2592
Salora.....	2443	Silver.....2594
Sambers.....	2445	Singer.....2599
Sampo.....	2446	Sinudyne.....2601
Samsung.....	2448	Skantic.....2605
Samurai.....	2451	SKY.....2610
Sandra.....	2454	Skymaster.....2621
Sansui.....	2458	Skyworth.....2631
Sanwa.....	2461	Slim Art.....2636
Sanyo.....	2462	SM Electronic.....2639
Sanyuan.....	2464	Sogera.....2649
Saville.....	2491	Solavox.....2654
SBR.....	2492	Sonawa.....2663
ScanMagic.....	2496	Songdian.....4136
Schaub Lorenz.....	2500	Soniko.....2669
Schneider.....	2501	Sonitron.....2671
Scientific Labs.....	2504	Sonneclair.....2673
Scott.....	2508	Sonoko.....2675
Seeltech.....	2519	Sonolor.....2676
SEG.....	2522	Sontec.....2677
SEI.....	2524	Sontech.....3435
Sei-Sinudyne.....	2525	Sony.....2679
SEI-Sinudyne.....	2525	Sound & Vision.....2680
Seleco.....	2528	Soundmaster.....2685
Sencora.....	2531	Soundmax.....2687
Sentra.....	2534	Soundwave.....2689
Sentron.....	4216	Spectra.....2697
Serino.....	2539	Srypton.....4138
Shanghai.....	2547	Standard.....2713
Shanshui.....	4133	Star Cluster.....3724
Shaofeng.....	2549	Starlight.....2727
Sharp.....	2550	Starlite.....2728
Shencai.....	2553	Starmedia.....2730
ShengCai.....	4217	Stenway.....2739
Shenyang.....	2555	Stern.....2741
Sherwood.....	2557	Strato.....2745
Shintom.....	2563	Stylandia.....2752
Shintoshi.....	2564	Sunkai.....2762
Shivaki.....	2567	Sunstar.....2768
Shorai.....	2569	Suntronic.....2770
Siam.....	2572	Sunwood.....2772
Siarem.....	2573	Superla.....2782
Siemens.....	2574	Supersonic.....2787
Siera.....	2576	SuperTech.....2789
		Supervision.....2791
		Supra.....2792
		Susumu.....2797
		Sutron.....2798
		Sydney.....2808
		Sylvania.....2809
		Symphonic.....2810
		Synn.....2813
		Sysline.....2815
		Sytong.....2820
T		
T.D.E. Systems.....	2822	Tesmet.....3550
Tactus.....	2825	Tevion.....2962
Taishan.....	2835	Texet.....2963
Taisho.....	2836	Thomson.....2972
Tandberg.....	2842	Thorn.....2974
Tandy.....	2843	Tiankeban.....4142
Tashiko.....	2850	Tobo.....2999
Tatung.....	2852	Tokai.....3001
TCL.....	2856	Tokyo.....3004
TCM.....	2857	Tomashi.....3006
Teac.....	2860	Tonsai.....4223
Teachimagen.....	4140	Top Suxess.....3013
Tec.....	2861	Toshiba.....3021
Tech Line.....	2863	Towada.....3028
Techica.....	2865	Towika.....4224
Technema.....	2866	Toyoda.....3030
Technics.....	2869	Trakton.....3036
Technika.....	2870	Trans Continens.....3037
TechniSat.....	2873	TRANS-continents.....3039
Tedalex.....	2889	Transfec.....4143
Teleavia.....	2901	Transonic.....3041
Telecor.....	2910	Transtec.....3042
Telefunken.....	2914	Trident.....3054
Telefusion.....	2915	Trio.....3056
Telegazi.....	2917	Tristar.....3057
Telemeister.....	2924	Triumph.....3058
Telesonic.....	2930	TruVision.....3061
Telestar.....	2931	TSM.....3065
Teletech.....	2934	TVA.....4225
Teleton.....	2935	
Televidcon.....	2938	U
Teleview.....	2939	Uher.....3089
Televiso.....	2941	Ultravox.....3095
Temco.....	2946	Umax.....3098
Tennessee.....	2952	Unic Line.....3100
Tenosal.....	2953	Union.....3781
Tensai.....	2954	United.....3106
Tenson.....	2955	United Quick Star.....4226
		Universal.....3113
		Universum.....3115
		Univox.....3116

V

Vestel	3148
Vexa	3149
Vibrant	3154
Victor	3155
Videologic	3165
Videologique	3166
Videon	4227
Videosat	3170
VideoSystem	3172
Videotechnic	3173
Videoton	3174
Viewmaster	3182
Viewsonic	3186
Visiola	3197
Vision	3198
Vistar	3207
Vortec	3217
Voxson	3220

W

Waitec	3227
Waltham	3230
Watson	3233
Watt Radio	3234
Wega	3238
Wegavox	3239
Welltech	3244
Weltblick	3245
Weston	3251
Wharfedale	3255
White Westinghouse	3258
Windstar	3266
Woxter	3286

X

Xbox	3295
Xiahua	3299
Xiangyu	3302
Xingfu	3305
Xinghai	3306
Xinrisong	3308
Xlogic	3310
XMS	3312
Xoro	3315
Xrypton	3317
Xuelian	3320

Y

Yakumo	3324
Yamada	3325
Yamaha	3326
Yamakawa	3327
Yamishi	3328
Yokan	3335
Yoko	3336
Yorx	3340
Yuhang	3345
Yukai	3346

Z

Zanussi	3349
Zenith	3356
ZhuHai	3364

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste.

Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5359 1

November 2010

www.philips.com

RTP/4710